

Innovative Door-Jack™

Assembly Instructions



1
Insert wheels to lower support tubes P/N 430-010. Tighten with 3/4" hand wrench.




2
Insert support tubes to lower frame support P/N 430-012. Tighten with 9/16" hand wrench.




3
Install frame post P/N 430-013 on lower frame support. Tighten with 9/16" hand wrench.



4
Bolt together front support plate P/N 430-020 using 1/2" x 5/8" bolts and 1/2" lock nut. *Note: do not over tighten.*

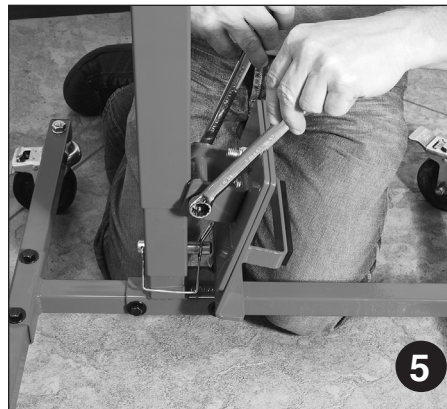

5
Attach support plate using 5/16" x 3 1/4" bolt to jack assembly P/N 430-014. *Note: do not over tighten.*

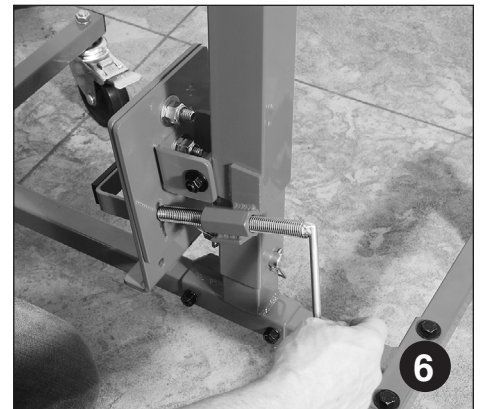


6
Screw in hand screw P/N 430-018 into jack assembly.



7
Attach support arm P/N 430-016 to support plate assembly using 5/16" x 2" bolts. Tighten with 9/16" box wrench.



8
Insert upper support arm P/N 430-024.

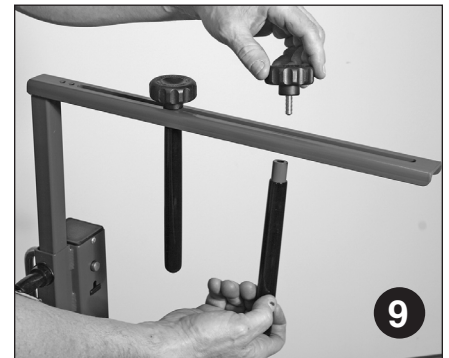

9
Attach vertical supports P/N 430-026, using plastic knobs P/N 430-025.



10
Bungee hook storage

Innovative Door-Jack

www.innovativetools.com

