



Other applications where 3M Smooth Transition Tape can be used:



Masking jambs/apertures for highest quality repairs.



Masking body lines.




Feathering stone chip coatings.



Masking awkward areas – eg light clusters.



Local "Smart" repairs – eg wheel arch damage etc.

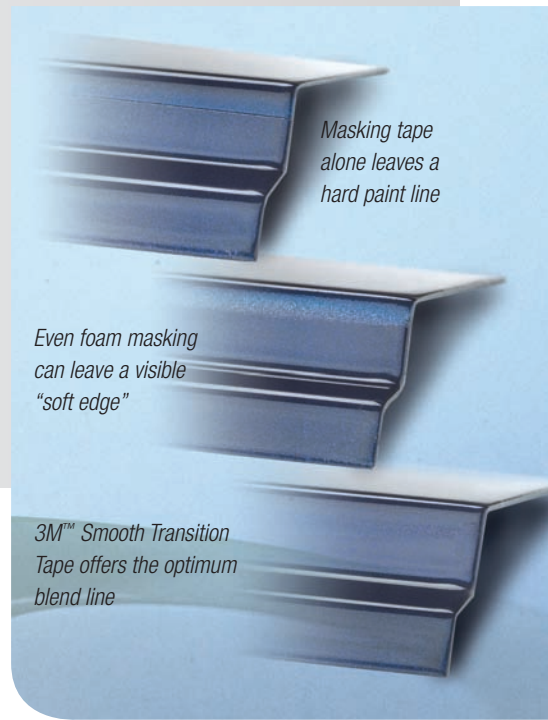

Masking tape alone leaves a hard paint line

Even foam masking can leave a visible "soft edge"

3M™ Smooth Transition Tape offers the optimum blend line

Part No.	Product	Pack	Size
06800	3M™ Smooth Transition Tape	5 rolls x 9 m	0.63 mm
50421	3M™ Soft Edge Foam Masking Tape PLUS	7 cords = 49 m	21 mm



Automotive Aftermarket,
3M United Kingdom PLC

3M Centre,
Cain Road, Bracknell,
RG12 8HT
Tel: 016 1237 6391
Fax: 016 1237 5911
aadukenquiries@mmm.com

Automotive Aftermarket,
3M Ireland Limited

The Iveagh Building
The Park, Carrickmines
Dublin 18
Tel: (01) 280 3555
Fax: (01) 280 3509

Please recycle. Printed in UK.
© 3M 2010. All rights reserved.

3M is a trademark of the 3M Company

www.3Mbodyshop.co.uk



Smooth solution to hard paint lines

3M Smooth Transition Tape 06800

3M Smooth Transition Tape is the perfect solution for virtually eliminating defined paint lines anywhere you transition paint, primer or other coatings. The product design confines the base adhesive layer to the centre of the tape which allows the paint or coating to feather to a smooth transition line.

- Virtually eliminates rework caused by poor paint transition
- Speeds throughput and helps achieve high quality repairs

“One-Step” Primer and Paint Repairs with 3M™ Smooth Transition Tape 06800 and 3M™ Soft Edge Foam Masking Tape PLUS 50421

Filler repairs can often require primer and paint application across an aperture (eg door gap). Normally this would require a two stage masking process with the masking for the primer application being removed after baking to allow sanding before re-mask and paint.

New 3M Smooth Transition Tape 06800 used in conjunction with 3M Soft Edge Foam Masking Tape PLUS 50421 gives a high quality repair in only ONE step.


- View the 3M Soft Edge Foam Masking Tape PLUS & 3M Smooth Transition Tape System Video on-line at www.3Mbodyshop.co.uk




This filler repair needs to be primed across the door aperture.



Apply to the edge of the door jamb where the primer line should stop.

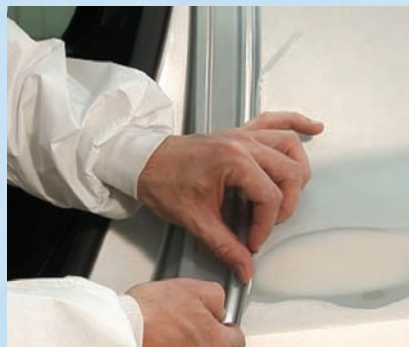

Leave the leading edge of the tape exposed from the aperture – for easy removal later.

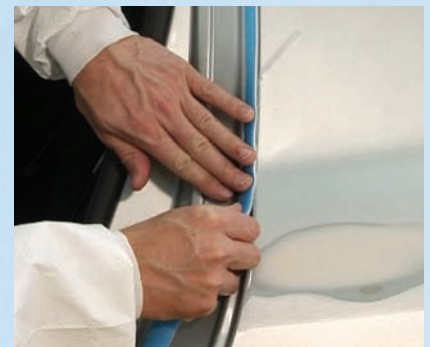

Apply 3M Soft Edge Foam Masking Tape PLUS over the 3M™ Smooth Transition Tape – position in the normal way.



With 3M Soft Edge Foam Masking Tape PLUS and remaining masking still in place



Sand the primer and blow down and degrease in the normal way.





Once painted and baked, remove 3M Soft Edge Foam Masking Tape PLUS and remaining masking products.

A unique combination from 3M using 3M™ Smooth Transition Tape and 3M™ Soft Edge Foam Masking Tape PLUS to help eliminate paint lines.



Firstly take 3M Smooth Transition Tape.

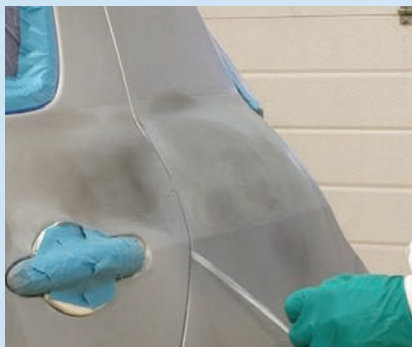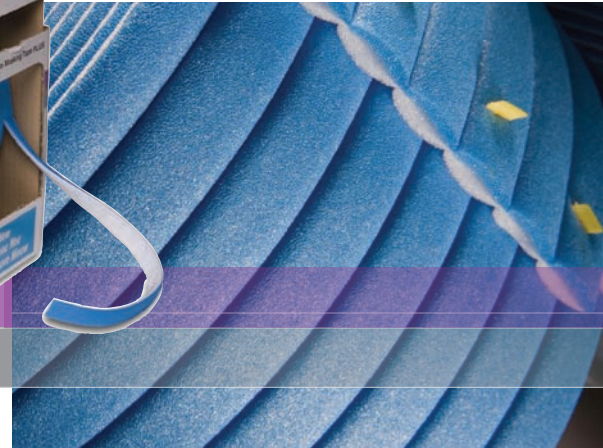


Once primed and baked, remove the 3M Smooth Transition Tape WITHOUT opening the door.



A high quality finish in ONE MASKING STEP.

3M Smooth Transition Tape is placed on the edge of the door aperture – beneath the 3M Soft Edge Foam Masking Tape PLUS

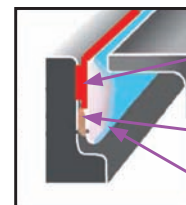


3M Smooth Transition Tape 06800

Adhesive line

3M Soft Edge Foam Masking Tape PLUS 50421

When primed, the 3M Smooth Transition Tape acts as the "stop-line"

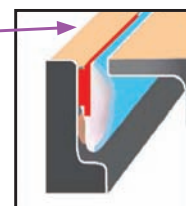

This stop line is a smooth transition line and is easily sanded to allow the blending of colour and clear coats



The colour and clear coats can then extend beyond the primer line to "soft edge" on the 3M Soft Edge Foam Masking Tape PLUS

