

Each car manufacturer uses a different set of rivets for various car body repairs. The rivets' application and extraction is made easier with the GYSPRESS 8T and the use of the vehicle brand's specific dies.

## RIVETING DIES



T1 + T2      Punching die Ø 6 mm.



T3 + T4      Holes drilling Ø 8 mm.



F1 + F2      Flow-Form Ø 6 mm rivets.  
Rivets : A1, A2, A3, S0, S1, S2, S3, S4, S5 and S6



F5 + F4      Flow-Form Ø 8 mm rivets.  
Rivets : S08 and S18



F3 + F4      Flow-Form Ø 8 mm rivets.  
Rivets : S28, S38, S48, S58, S68



E3 + E4      Extraction de rivets Flow-Form Ø 6 mm.




E3 + E5      Extraction of Ø 8 mm Flow-Form rivets.

**WARNING ! This kit cannot be used with the HR1 arm. It must be used with the HR1S / HR2 / HR3 arms.**

## COMPATIBILITY

These dies are designed to be used with the GYSPRESS 8T.

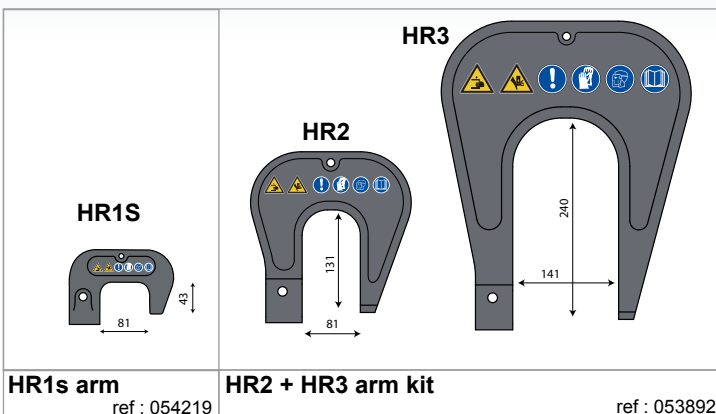

			HR1S 	HR2 	HR3 	Temps de cycle	Pression air (bar)
	58 x 48 x 15 cm	6 kg	2 kg	4 kg	9 kg	6 sec	normal 8 maxi 10